15^{TH} INTERNATIONAL JUNIOR SCIENCE OLYMPIAD

IJSO-2018



Discovery, Innovation and Environment

Laboratory Experiment

- Exam Sheet -

December 8, 2018

Do NOT turn to next page before a whistle is blown. Otherwise, you will receive a penalty.

- 1. You have 10 minutes to read "EXAMINATION RULES", "EXAM INSTRUCTIONS", and "CALCULATOR INSTRUCTIONS" on pages 1 3.
- 2. Do NOT start answering the questions before the "START" whistle! Otherwise, you will receive a penalty.

EXAMINATION RULES

1. You are NOT allowed to bring any personal items into the examination room, except for



Laboratory Experiment

Time: 3 hr Points: 30 Page 1

personal medicine or approved personal medical equipment.

- 2. You must sit at your designated desk.
- 3. Check the stationery items (pen, calculator, and rough book) provided by the organizers.
- 4. Do NOT start answering the questions before the "START" whistle.
- 5. You are NOT allowed to leave the examination room during the examination except in an emergency in which case you will be accompanied by a supervisor/volunteer/invigilator.
- 6. Do NOT disturb other competitors. If you need any assistance, you may raise your hand and wait for a supervisor to come.
- 7. Do NOT discuss the examination questions. You must stay at your desk until the end of the examination time, even if you have finished the exam.
- 8. At the end of the examination time you will hear the "STOP" whistle. Do NOT write anything more on the answer sheet after this stop whistle. Arrange the exam, answer sheets, and the stationary items (pen, calculator, and rough book) neatly on your desk. Do NOT leave the room before all the answer sheets have been collected.

Laboratory Experiment

Time: 3 hr Points: 30 Page 2

EXAM INSTRUCTIONS

- You are NOT allowed to bring any personal items into the examination room, except for personal medicine or approved personal medical equipment.
- 2. You must sit at your designated table.
- 3. Check the stationery items (pen, calculator, ruler, and scrap paper) provided by the organizers.
- 4. Do NOT start your experiments before the "START" signal.
- 5. You are NOT allowed to leave the examination room during the experiment, except in an emergency in which case you will be accompanied by a supervisor/volunteer/invigilator.
- 6. Do NOT disturb other competitors. If you need assistance, raise your hand and wait for a supervisor to come.
- 7. You can ONLY ask questions and discuss the experiments with your own team members.
 - You must STAY at your table until the end of the time allocated for the experiments, even if you have finished the experiments or do not wish to continue.
- 8. At the end of the experiment time you will hear the "STOP" signal. Do NOT write anything more on the answer sheet after this stop signal. Arrange the exam, answer sheets, and the stationary items (pen, calculator, ruler, and scrap paper) neatly on your desk. Do NOT leave the room before all the answer sheets have been collected.

EXPERIMENT INSTRUCTIONS

1. After the "START" signal, you will have 15 minutes to read the experiments. In this time, it is NOT allowed to conduct the experiment yet, or answer the questions.



Laboratory Experiment

Time: 3 hr Points: 30 Page 3

- 2. After the first 15 minutes, another whistleblow will indicate that you can start the experiment and start answering question. From this moment you have three hours to complete the test.
- 3. Use only the pen and pencil provided by the organizers.
- 4. The total number of experiments is 3. Check if you have a complete set of the exam sheets (20 pages, page 4 page 20) and answer sheets (28 pages including the front page). Raise your hand, if you find any sheets missing.
- 5. Check that your name, code and country are filled in on your answer sheets and sign every page of the answer sheets. Raise your hand, if you find any sheets missing.
- 6. Read the experimental procedures and questions carefully and write your answers in the corresponding boxes of the answer sheets.
- 7. When units are provided in the answer sheets, you have to write the answers correctly for the units.
- 8. Always show your calculations if room for this is provided. If you do not show your calculations, no points are awarded for the question.
- 9. You should write your final answers down in the appropriate number of digits.
- 10. You MUST wear a Lab Coat and Safety Glasses during the experiments.

INSTRUCTIONS FOR CALCULATOR

1. Turning on: Press ON/C.

2. Turning off: Press 2ndF ON/C.

3. Clearing data: Press ON/C.

4. Addition, subtraction, multiplication, and division

Example 1) $45 + \frac{285}{3}$


ON/C 45 + 285 ÷ 3 =

140.



Laboratory Experiment

Time: 3 hr Points: 30 Page 4

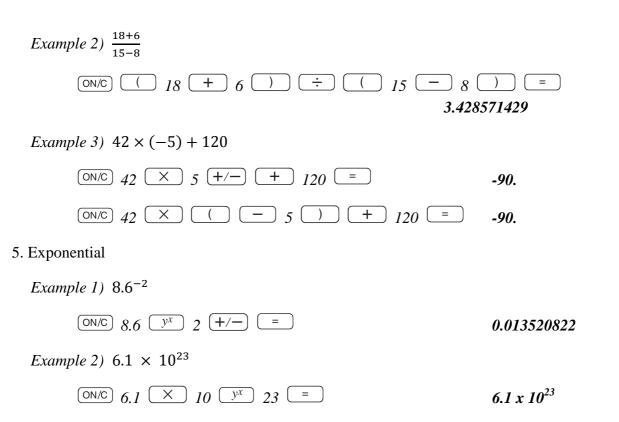

6. To delete a number/function, move the cursor to the number/function you wish to delete, then press DEL. If the cursor is located at the right end of a number/function, the DEL key will function as a back space key.

Do NOT turn to next page Before the "START" whistle is blown. Otherwise, you will receive a penalty.



Laboratory Experiment

Time: 3 hr Points: 30 Page 5

BIOLOGY

Biology Practical [13.4 points]

Q1. [7.15 points] Draw a sketch of the spots observed on your TLC plate, and complete the table in your answer sheet with *Rf* values and proposed pigments (Roman numeral from Table 1, one per spot):

[1.75 points – awarded in a deductive manner – loss of points for omissions] Each lane corresponds to the original – check photograph for comparison and check if any obvious spots are omitted.

[1.9 points (0.1 x 19)] for the drawing. Minimum 7 for lane A (& 1 weak), min. 5 for B, min. 6 for lane C (& some weak), max. 1 for lane D (lose points for additional spots – carry over)

[2.0 points, 0.25per Rf (0.25x8)] Points for the calculation of Rf. (margin of error? Invigilators will prepare and run plate in their rooms and take photo for comparison and to decide Rf for grading)

[1.5 points, 0.25 per pigment (0.25x6)] Suggested pigments – minimum of six correct. If the same pigment is present in A,B&C but not identified in one, deduct one third of marks (0.08), if present in two lanes and only identified once, deduct 50% of marks (i.e. 0.125)

Spot no.	Calculations	Rf	Suggested
(e.g. A1)			pigment, if
			any



Laboratory Experiment

-		
L		
[]		
L J		
- -		
l L J		
- -		
B		



Laboratory Experiment

	Spot no. (e.g. A1)	Calculations	Rf	Suggested pigment, if any
C				



Laboratory Experiment

D		



Laboratory Experiment

Time: 3 hr Points: 30 Page 9

Q2 [1.0 points, 0.25 per statement]

For the following observations about the sample in lane D, mark in your answer sheet whether the following statements are true or false [X points].

Statement	True	False
It separated into distinct pigments, which are not		Х
present in other lanes.		
It separated into distinct pigments, which are		Χ
also present in other lanes.		
It did not move with mobile phase.	Χ	
It does not contain any pigments		Χ

Q3 For the following statements, mark in your answer sheet whether the following statements are true or false [1.0 points, 0.25 per statement]

The TLC chamber (bottle) is closed to...

Statement	True	False
To prevent evaporation of the mobile phase.	Χ	
To avoid the smell of the chemicals contained in the mobile phase.	Х	
To maintain a dust-free environment.	Х	
To decrease the pressure in the chamber		Χ



D. Chlorophyl b

15th International Junior Science Olympiad University of Botswana December 8, 2018

Laboratory Experiment

Time: 3 hr Points: 30 Page 10

Q4. Indicate in your answer sheet, whether each of the factors below affect the *Rf* value of a compound [1.75 points, 0.25 per statement]

	Affects Rf	Does not affect Rf
A. Polarity of compound	X	
B. Distance travelled by solvent (mobile phase)		X
C. Size of TLC plate		X
D. Type of stationary phase	X	
E. Amount of sample loaded		X
F. Size of chamber		X
G. Color of the sample		X

Q5. Write the letter that corresponds to the pigmen	t that moves	slowest up the TLC plate in
the box on your answer sheet. [0.25 points]		
A. Chlorophyl <i>a</i>		
B. Xanthophyll 1		
C. Pheophytin		

Q6 [1.0 points, 0.25 per statement] For the following statements, mark in your answer sheet whether the statements are correct or incorrect.

A compound moves slower than others up a TLC plate in our experimental conditions because...

Correct	Incorrect
	X
X	
	X
	X
	Correct X

Q7. Will the Rf values change if the ratio of polar and non-polar solvents in the mobile	phase
is changed? Write the letter that corresponds to your answer in the box on your answer	sheet.
[0.25 points]	
A. Yes	

Ā.	Yes
B.	No



Laboratory Experiment

Time: 3 hr Points: 30 Page 11

Q8. What could potentially limit the effectiveness of the chromatographic technique you have used? [1.0 points, 0.25 per statement]

Statement	Correct	Incorrect
Leaving the TLC chamber open	X	
The amount of mobile phase in the TLC chamber	X	
Geographical location where the experiment is		X
performed		
Running multiple plates in one TLC chamber		X



Laboratory Experiment

Laboratory Experiment

Time: 3 hr Points: 30 Page 13

CHEMISTRY

Experiment II: Determination of acid content in a fruit acid solution [13.3 points]

ANSWER KEYS

Standardization of the NaOH

Question	Record the volume of NaOH (mL) solution used in the standardization
(Points)	
II-1a [3.5	Titration #1 Titration #2 Titration Titration
points]	
	Initial Vol.
	End Vol
	Vol. Used
	[1.0 for proper and consistent recording and 0.5 point for at least two titrations]
	Average NaOH volume usedmL [0.5]
	Precision = $[\max 0.5] \pm 0.1$, $[award 0.5]$, ± 0.2 , $[award 0.25]$, any value beyond 0.2 award 0.0 mark, for the two best titrations
	Accuracy = $[\max 1.0] \pm 0.3$ $[award 1.0], \pm 0.5$ $[award 0.5], \pm 1.0$ $[award 0.25]$



Laboratory Experiment

Question	Write down a balanced chemical equation for the titration reaction of oxalic
(Points)	acid (H ₂ X) with NaOH
II-1b	
[0.25	$2NaOH + H_2X$ $Na_2X + 2H_2O$
points]	If not balanced substract 0.1 points
Question	Calculate the concentration of the NaOH solution
(Points)	
II-1c	
[0.5 points]	Mol of $H_2X = 0.100 \text{ mol/L} \times 10 \text{ mL/1000 mL} = xxxx \text{ mol}$
	Mol ratio of NaOH to $H_2X = 2:1$ [0.25]
	Mol of NaOH = $xxxx$ mol x 2
	Concentration of NaOH = xxx/ Titre value = yyy mol/L [0.25]
	Accept alternative suitable calculations



Laboratory Experiment

Time: 3 hr Points: 30 Page 15

Titration of fruit acid solution

Question	Record the volume of NaOH (mL) solution used
(Points)	
II-2	Titration #1 Titration #2 Titration Titration
[3.5 points]	Initial Vol
	End Vol
	Vol. Use
	[1.0 for proper and consistent recording and 0.5 point for at least two titrations]
	Average NaOH volume used
	Precision = $[\max 0.5] \pm 0.1$, $[award 0.5]$, ± 0.2 , $[award 0.25]$, any value beyond 0.2 award 0.0 mark, for the two best titrations
	Accuracy = $[\max 1.0] \pm 0.3 [award 1.0], \pm 0.5 [award 0.5], \pm 1.0 [award 0.25]$

Question	Write down the balanced equation for the titration reaction
(Points)	
II-3	$HA_{(aq)} + NaOH_{(aq)} \rightarrow NaA_{(aq)} + H_2O_{(l)}$
[0.25 points]	Do not penalize for the state symbols



Laboratory Experiment

Question	Determine the number of moles of NaOH used in the titration
(Points)	
II-4	Moles = Con x vol
[0.5 points]	
	$= 0.1 \text{ mol/L} \times 25.65 \times 10^{-3} \text{ L} [0.25]$
	$= 2.565 \times 10^{-3} \mathrm{mol}$ [0.25]

Question	Determine the mass (g) of acid in the fruit acid solution titrated with NaOH
(Points)	solution
11.5	M.L. C. CN OH, HA: 1110.051
II-5	Mole ratio of NaOH: HA is 1:1 [0.25]
[1.0 points]	
	HA moles = $2.565 \times 10^{-3} \text{ mol}$ [0.25]
	MW of $HA = 60.0 \text{ g/mol}$
	Mass of HA = $2.565 \times 10^{-3} \times 60.0 \text{ g/mol}$ [0.25]
	$= 1.539 \times 10^{-1} \text{ g or } 0.1539 \text{ g} [0.25]$



Laboratory Experiment

Question	Assuming the density of fruit acid solution is 1.005g/mL, determine the mass
(Points)	(g) of 4 mL solution.
II-6	
[0.5 points]	Mass = density x volume
	1.005g/mLx 4.0 mL [0.25]
	4.02 g [0.25]

Question	Determine the % mass of the acid in fruit acid solution.
(Points)	
II-7 [0.5	= 0.1539 g/4.02 g x 100% [0.25]
points]	= 3.83 % [0.25]

Question	Calculate the volume of the fruit acid solution that the student used?
(Points)	
II-8	
[1.0 points]	Mole of NaOH = $0.54 \text{ mol/L} \times 25 \times 10^{-3} \text{L}$
	= 0.0135 mol [0.25]
	Moles ratio is 1:1, therefore HA mol is 0.0135 mol. [0.25]
	Concentration of fruit acid solution = moles/volume = 2.565 x



Laboratory Experiment

$1.35 \times 10^{-3} \text{mol}/25.65 \times 4 \times 10^{-3} \text{L}$
=0.641 mol/L
Volume of fruit acid solution required = moles/conc
= 0.0135 mol / 0.641 mol/L
=0.021 L
=21 mL [0.5]
OR Volume of fruit acid solution = $25 \text{ mL } \times 0.54 \text{ mol/L} / 0.641 = 21.09 \text{ mL}$ [0.5]

Question	Another student has measured the pH of the fruit acid solution to be 2.75. Use
(Points)	this value and your data to determine the pK _a of the fruit acid solution.
II-9 [0.5	
points]	$pKa = Sq ext{ of } pH$
	= ????????



Laboratory Experiment

Calculate the Kb of the conjugate base of the fruit acid solution
pKa + pKb = 14
14-pKa = y
$Kb = 10^{-y}$

Question	Calculate the pH at end point. Use the Kb from the previous question						
(Points)							
II-10b [0.5							
points]	Kb = [HA] [OH]/[A]						
	$Kb = X^2/x-z$						
	$z = mol HA/ 4*10^{-1}$						

Question	If phenolphthalein was unavailable, which of the following indicators would be								
(Points)	most suitable for this titration.								
II-11 [0.3	Tick the correct box								
points]	Indicator	pKa							
	Methyl violet	0.8							
	Thymol blue	1.6							
	Methyl yellow	3.3							
	Bromocresol green	4.7							
	Thymol Blue	8.9	√						



Laboratory Experiment

Time: 3 hr Points: 30 Page 20

PHYSICS

Physics Laboratory practical

Total marks [13.3]

Title: Determination of the coefficient of viscosity of oil

Introduction

While water can be poured from one container to another easily, honey takes a very long time to flow out of its container. The reason for these different rates of flow is that honey is more viscous and resists flow more than water does. The coefficient of viscosity is a measure of the degree of internal resistance to flow and shear. Coefficient of viscosity is an important parameter in food industry. Flow of various components of the raw materials to the final product in an automated food industry will depend on this.

The viscosity can be determined by measuring the velocity of a falling sphere through a column of fluid of unknown viscosity. This is accomplished by dropping a sphere through a measured distance in a column of fluid and measuring how long it takes to travel the distance.

Materials

- Thermometer
- Balls of 4 different diameters
- Cylindrical vertical tube filled with oil
- Stopwatch
- Meter ruler
- Tape to mark
- Paper towel
- Magnet



Laboratory Experiment

Time: 3 hr Points: 30 Page 21

Theoretical aspects

Consider a spherical ball bearing of radius r and density ρ_s falling through a column of fluid of coefficient of viscosity η and density ρ_f as illustrated figure 1 below.

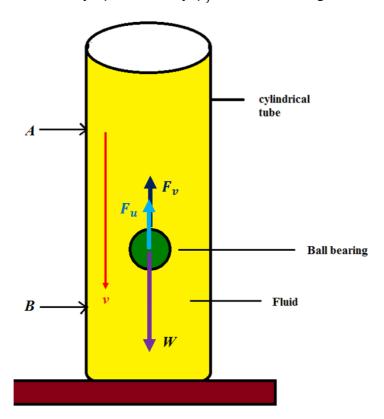


Figure 1: Showing a spherical ball of radius r falling through a column of fluid of density ρ_f . A and B marks the distance travelled by the sphere at terminal velocity v_t .

Initially the ball has some downward acceleration a until the ball acquires a constant velocity, called terminal velocity v_t . According to Newton's second law:

Net Force
$$= ma$$

$$ma = W - (F_u + F_v) \tag{1}$$

Where:

m is the mass of the ball.

W = mg is the weight of the ball.



Laboratory Experiment

Time: 3 hr Points: 30 Page 22

 $F_u = \frac{4}{3}\pi r^3 \rho_f g$ is the buoyant force = weight of the fluid displaced (Archimedes law)

 $F_v = 6\pi \eta r v$ is the viscous force (of a sphere of radius r) proportional to the velocity v of the ball (Stokes's Law).

Secondly when the ball attains terminal velocity before point A, there is no more acceleration and hence the net force is zero. Note that l is the distance between A and B and t is the time the ball takes to fall between A and B.

Procedure

[1.3]

- 1. Measure the temperature T_b of the oil before starting the experiment and write it in the box on the answer sheet.
- 2. Use the tape to mark two horizontal lines (**A** and **B**) on the cylindrical tube so that line **A** is 70 cm from the surface of the fluid. Line **B** should be approximately 50 cm below point **A**.
- 3. Measure the vertical distance *l* between points **A** and **B**. and write it in the box on the answer sheet provided.
- 4. Devise a method to measure the average diameter of the balls using the ruler scale as accurately as possible. Describe your method using only a sketch in the space provided.
- 5. Use your method to measure the average diameter of each of the four different sizes of balls and write these values in Table III-1 on the answer sheet.
- 6. Release one of the balls carefully into the fluid at the center of the surface (ensuring that the ball is not near the wall of the cylinder during its motion between **A** and **B**)
- 7. Measure the time *t* taken by the ball to travel the distance *l* between **A** and **B** and record it in the provided table.
- 8. Repeat steps 6 and 7 above using other balls of the same diameter to have three values of time (the magnet can be used to pull the balls along the cylinder wall out of the oil, ask for help if necessary).
- 9. Repeat steps 6 to 8 for the other 3 sizes of balls.
- 10. Measure the temperature T_a of the oil just after finishing the experiment and write it in the box on the answer sheet.

Note the following constants:

Density of the fluid $\rho_f = 871.4 \text{ kg/m}^3$ Density of the ball $\rho_s = 7717 \text{ kg/m}^3$ Acceleration due to gravity $g = 9.81 \text{ m/s}^2$



Laboratory Experiment

Time: 3 hr Points: 30 Page 23

..9- --



Laboratory Experiment

Time: 3 hr Points: 30 Page 24

(DO NOT PROVIDE YOUR FINAL ANSWERS HERE USE THE ANSWER BOOKLET

Results and analysis

III-1 Calculate the average time, d^2 and v_t for each set of ball bearings, and complete Table III-1 on the answer sheet.

[5.0]

Table III-1: Experimental results

Ball diameter			Diameter squared	Tim	Terminal velocity			
#	d (mm)	d (m)	d^2 (m ²)	t ₁ (s)	t ₂ (s)	t ₃ (s)	Average time (s)	v_t (m/s)
1								
2								
3								
4								

- III-2 Plot a graph of v_t (y-axis) versus d^2 (x-axis) and draw a straight line of best fit on the grid on the answer sheet. [3.0]
- III-3 Determine the slope of the graph. Indicate the points that are used on the graph for calculating the slope. Give your answer with appropriate units. [1.5]
- **III-4** The following formula for the terminal velocity v_t can be derived from equation (1):

$$v_t = C \cdot \frac{d^2}{n} \tag{2}$$

Where $C = 3731 \text{ kg m}^{-2}\text{s}^{-2}$. Write down in the space provided the analytical expression for C in terms of g, ρ_s and ρ_f . [1.0]



Laboratory Experiment

Time: 3 hr Points: 30 Page 25

III-5 Use the value of the slope to determine the coefficient of viscosity η of the oil with the appropriate units. [1.5]